
## B/TRATCO

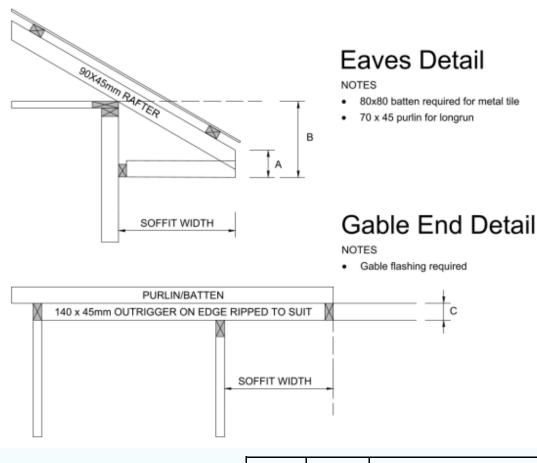

## NOTES

- Inform precut frame & truss supplier Stratco 185mm Continuous Fascia is being used.
- Soffit bearer is installed to right hand side of rafter when looking at the building.
- Scaffolding required to be installed prior to installation and must comply with Worksafe and Working at Heights requirements.
- Scaffolding must extend at least 500mm past roof external/gable corners. It also needs to be at a height to allow the safe installation of fascia/ gutter systems which may mean scaffold heights needing to adjusted for roof installation. Confirm heights with the installer before erecting scaffold.
- Scuffing and scratching can damage steel with a pre-coloured finish. To minimise this, Stratco supplies gutters and fascia with a removable plastic coating. Do not leave this coating exposed to the sunlight for long periods of time as it may become hard to remove. Remove the plastic coating as the product is being installed—do not leave it on to remove at a later stage.
- Do not drag rainwater products across or over each other. Also do not drag other materials across or over rainwater products. For safety, wear gloves when handling steel products and ensure your hands or gloves are clean when handling.
- Steel products should be kept dry before installation. Separate and dry these products immediately if they get wet, as discolouration can occur.

ROOF PITCH	TOE CUT (A) mm	SOFFIT DROP (B) mm			TOP CHORD
		450	600	750	DROP (C) mm
10	127	115	141	168	125
12.5	128	135	169	202	125
15	129	156	197	237	125
17.5	131	179	226	273	125
20	133	201	256	310	125
22.5	135	224	286	348	125
25	138	249	318	388	125
27.5	141	274	352	430	125
30	144	300	386	473	125
35	150	345	450	555	115
40	156	404	530	656	110
45	162	479	629	778	110



stratco.co.nz