


10G SCREWS @ MAX
600MM CTS, 8G
SCREWS @ MAX 400MM
CTS

IF TIMBER FRAMING IS
LESS THAN 30MM DEEP,
USE NYLON ANCHOR
TO FIX TO 30MM MIN
DEPTH INTO CONCRETE

TIMBER SHOWN IS
INDICATIVE ONLY. SEE
STRUCTURAL PLAN
FOR TIMBER LAYOUT

ALL SCREWS INTO
TIMBER ARE TO HAVE A
MINIMUM DISTANCE TO
EDGE OF TIMBER OF
15MM

PANELS BIGGER THAN
2.9 SQM REQUIRE
STRATCO ACP
STIFFENERS AT MAX
500 MM CTS

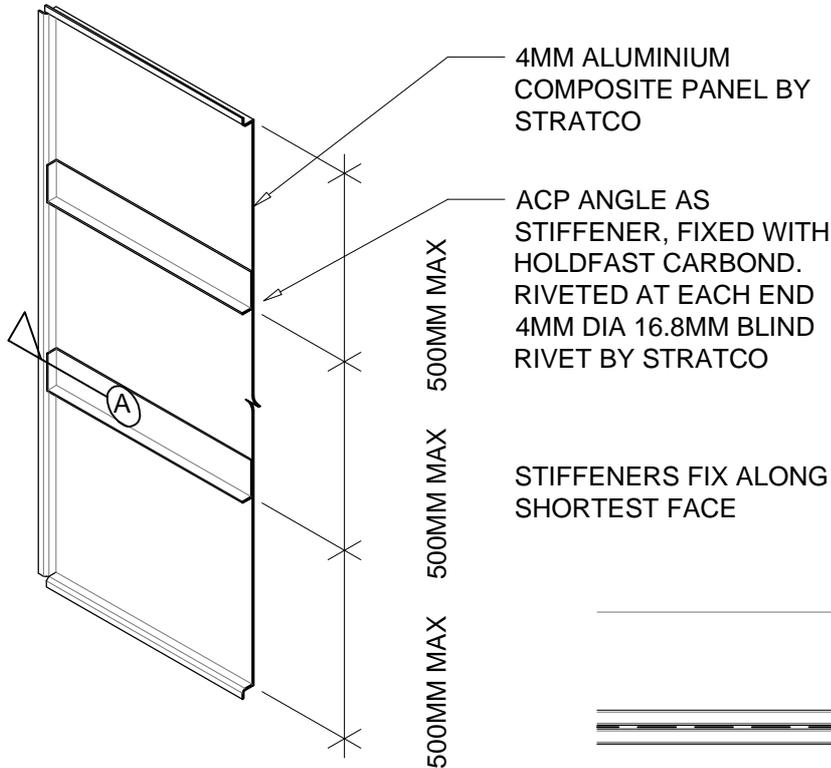

ACP PANEL INSIDE FACE
ISOMETRIC
NTS

STIFFENERS FIX ALONG
SHORTEST FACE



4MM ALUMINIUM
COMPOSITE PANEL BY
STRATCO

ACP ANGLE AS
STIFFENER, FIXED WITH
HOLDFAST CARBOND.
RIVETED AT EACH END
4MM DIA 16.8MM BLIND
RIVET BY STRATCO

**SECTION A - STIFFENER
EDGE FIXING**

D1.03 STIFFENER FIXING

D1.03 STIFFENER FIXING

SCALE: 1:2 @A4



JOB NAME: TBA
CONTRACTOR: TBA
JOB# NA QUOTE# NA

FILE: SEALED JOINT SYSTEM DETAILS 2017
DATE: 2017-08-07
DRAWN: AR