


10G SCREWS @ MAX  
600MM CTS, 8G  
SCREWS @ MAX 400MM  
CTS

IF TIMBER FRAMING IS  
LESS THAN 30MM DEEP,  
USE NYLON ANCHOR  
TO FIX TO 30MM MIN  
DEPTH INTO CONCRETE

TIMBER SHOWN IS  
INDICATIVE ONLY. SEE  
STRUCTURAL PLAN  
FOR TIMBER LAYOUT

ALL SCREWS INTO  
TIMBER ARE TO HAVE A  
MINIMUM DISTANCE TO  
EDGE OF TIMBER OF  
15MM

PANELS BIGGER THAN  
2.9 SQM REQUIRE  
STRATCO ACP  
STIFFENERS AT MAX  
500 MM CTS

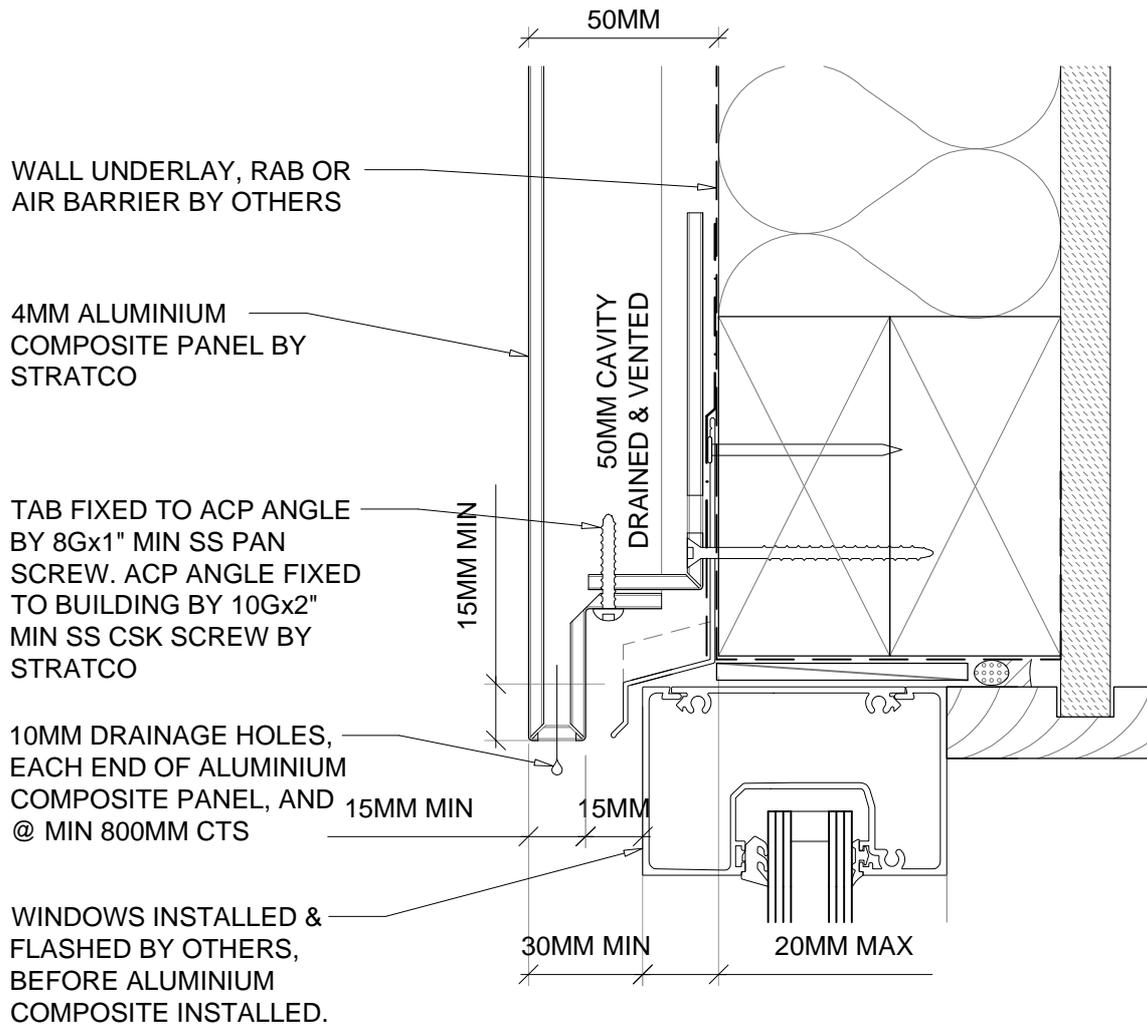

## D2.11 COMMERCIAL WINDOW HEAD

D2.11 COMMERCIAL WINDOW HEAD

SCALE: 1:2 @A4



JOB NAME: TBA  
CONTRACTOR: TBA  
JOB# NA QUOTE# NA

FILE: SEALED JOINT SYSTEM DETAILS 2017  
DATE: 2017-08-07  
DRAWN: AR